

1. Create New password (up to 5 passwords, creating the 6th one will cover the first one)

Press **1** and **▲▼** simultaneously for 5 seconds, and the background light will flash quickly and remain on. Release the button, enter a 4-digit new password, press **▲▼**, the buzzer will sound twice, and the background light will flash twice. Release **▲▼**, and the light will turn off. The new password is successfully created.



3: Clear password:

1) Press **4** and **▲▼** keys simultaneously for 5 seconds, the buzzer will sound 5 times quickly, the background light will flash 5 times quickly, and the light will go out after clearing the password successfully;

2) : Remove the battery, hold down the up and down buttons, connect the battery, and after 5 seconds, the buzzer will sound 5 times quickly, the background light will flash 5 times quickly, and the light will turn off. The password is cleared successfully;

2: Change password: (No need to restart learning on receiver)

Enter the 4-digit old password, press the PROG key, the buzzer will sound twice and the background light will flash twice. Enter the 4-digit new password, press the **▲▼**, the buzzer will sound twice and the background light will flash twice.

Release **▲▼** keys, the background light will turn off, and the password change is successfully.

4: Transmit and Learn on Receiver:

Enter a 4-digit password, press **▲▼** keys, the password is correct, the buzzer sounds twice, the background light flashes twice, and press the 1-4 keys (1-off, 2-on, 3-lock, 4-stop) to emit (the background light flashes quickly, and the emission light stays on). During the 1-4 button transmitting code, you can press the receiver learnt button to match. If the password is incorrect, the buzzer will sound for 1 second and the background light will remain on.